

Continue



[illegible]

pressing of “▲” or “▼” button,clock time will increase or decrease 1 minute.If hold “▲” or “▼” button, 2s later,time will change quickly.Release this button when reaching your required time.Clock time adopts 24-hour mode.The interval between two operation can't exceeds 5s. Otherwise, remote controller will quit setting status. Operation for T-ON/T-OFF is the same.GREE AC Sleep Function :Sleep function helps to keep you cool and comfortable throughout the night by increasing temperature gradually so you will not feel cold.Under COOL or HEAT mode, press this button to start up sleep function.“Crescent” icon is displayed on remote controller.Press this button again to cancel sleep function and “Crescent” icon will disappear.After powered on, Sleep Off is defaulted. After the unit is turned off, the Sleep function is canceled.In this mode, the time of timer can be adjusted. Under Fan, DRY and Auto modes,this function is not available.GREE AC X-FAN :Pressing this button in COOL or DRY mode, the icon “FAN” icon is displayed and the indoor fan will continue operation for a few minutes in order to dry the indoor unit even though you have turned off the unit. X-FAN is not available in AUTO, FAN or HEAT mode.Having set X-FAN function on: After turning off the unit by pressing ON/OFF button indoor fan will continue running for about a few minutes. at low speed.In this period, press X-FAN button to stop indoor fan directly.Having set X-FAN function off: After turning off the unit by pressing ON/OFF button, the complete unit will be off directly.GREE AC Health / Scavenging :When using Health function, Gree Ac will try to remove dust and germs from the room. A tree icon will display on the Gree Ac remote controller.When using Scavenging function, Gree Ac will bring fresh air from outside and remove old air from inside. A home icon with in-out arrows will display on the remote screen. Scavenging is very useful to remove odors from the room quickly. How to Activate Health / Scavenging ?Press health scavenging button to toggle between health and scavenging functions. Press this button to start scavenging function and “Home” icon will be displayed.Press the button for the second time to start healthy and scavenging functions both. Remote screen will displays “Home” and “Tree” icons.Press this button for the third time to quit healthy and scavenging functions both.Press the button for the fourth time to start healthy function, remote will display “Tree” icon.Press this button again to repeat the operation aboveNote : This function is applicable to some models.GREE AC Light :Press this button to turn off display light on indoor unit. “Bulb” icon on remote controller disappears.Press this button again to turn on display light “Bulb” icon is displayed.GREE AC Temp By pressing this button, you can see indoor set temperature, indoor ambient temperature or outdoor ambient temperature on indoor unit's display. The setting on remote controller is selected circularly as below:GREE AC Energy Saving Function :Under cooling mode, press “TEMP” and “CLOCK” buttons together to start up or turn off energy-saving function. When energy-saving function is started up, “SE” will be shown on remote controller, and air conditioner will adjust the set temperature automatically according to ex-factory setting to reach to the best energy-saving effect. Press “TEMP” and “CLOCK” buttons simultaneously again to exit energy-saving function.Note:● Under energy-saving function, fan speed is defaulted at auto speed and it can't be adjusted.● Under energy-saving function, set temperature can't be adjusted. Press “TURBO” button and the remote controller won't send signal.● Sleep function and energy-saving function can't operate at the same time. If energy-saving function has been set under cooling mode, sleep button will cancel energy-saving function. If sleep function has been set under cooling mode, start up the energy-saving function will cancel sleep function.GREE AC Child Lock :Press “▲” and “▼” simultaneously to turn on or turn off child lock function. When child lock function is on, “Lock” icon is displayed on remote controller. If you operate the remote controller, the “Lock” icon will blink three times without sending signal to the unit.GREE AC WIFI Function :Press “MODE” and “TURBO” button simultaneously to turn on or turn off WIFI function. When WIFI function is turned on, the “WIFI” icon will be displayed on remote controller; Long press “MODE” and “TURBO” buttons simultaneously for 10s,Remote controller will send WIFI reset code and then the WIFI function will be turned on. WIFI function is defaulted ON after energization of the remote controller.Other Interesting Articles :Frequently Asked Questions (FAQs) :Here are answers to your common questionsHow to Save electricity when using GREE AC ?Use inverter modelSet it at 27 °C, Instead of 18 °CSealed Room Door and WindowsUse Curtains on WindowsLess Furniture in the roomSwitch on and Switch off to Save ElectricityUse Fan with AC to reduce Electricity ConsumptionRegular Servicing and Cleaning Saves ElectricityHow to Check current indoor temperatureTo check indoor ambient temperature using Gree ac remote, press TEMP button, keep an eye on indoor unit display as indoor temperature will display for 3 seconds and then it will display the set temperature.How to use Gree AC when remote is lost ?You can turn on / off the AC by lifting indoor unit panel and pressing button on lower right hand side. If you turn on, it will operate in Auto mode and temperature can not be adjusted.How to Unlock Gree ac remote ?To Unlock, Press and hold the temperature UP / Down (“▲” or “▼”) Keys at the same time for 2 seconds. Press the UP / Down Keys again to Lock the gree ac remote control. Read more here.How to Reset Gree AC remote ?To reset gree ac remote, remove batteries, wait few seconds till display goes off, then put batteries back. Read more here How to Convert Celsius to Fahrenheit in GREE ?Power OFF the unit, then press MODE and Down arrow ▼ key.How to Use Gree Ac Remote Setting for Max Cooling ?If your Gree Air Conditioner is not Cooling there are several things to consider. May be it's just that you changed it's mode.Ideal Remote Settings for Gree Ac Cooling :Make Sure Cool mode is on, when it is on, a Tree icon will be displayed on the remote control and you will be able to set the temperature.For Quick Fast Cooling when you enter the room and turn on the Ac and want cool air immediately in a hot weather, Just Press Turbo Button on your Gree remote control. In turbo mode, fan speed will be maxium.If you are not using Turbo, then use the maximum fan speed, so that the air in the room should circulate fast.In my experience Grill Direction is very important, make sure vertical swing is down and fan speed can be felt on the floor instead of roof.Things To Check if Gree Ac is not Cooling :If all above settings are fine, but your Gree Ac is not cooling properly. Then Check these things :Clean Air Filter : Check your Gree Air Conditioner's Air Filter, just lift up the panel on indoor unit, there is a simple Vent shaped air cleaner, make sure to clean it regularly.Seal Windows and Doors : Check windows and door, if there is a gap below the door, it will leak the cooling. Similarly gaps in the window will leak the cooling. So, make sure to properly seal your Ac room.Call A Professional : If your Air Conditioner is still not cooling after performing all above task, Call a professional for Ac maintenance and repair staff. They will do the normal servicing and check for the gas leakage in pipes between indoor and outdoor unit.Gree Ac Manual(s) PDF :Model NameView ManualDownloadGree Sapphire Owner's ManualViewGree DC inverter Floor Ceiling U-match ManualViewGree Ac Livo Wall Ductless ManualViewGree Ac Console Type ManualViewGree DC inverter Ac GMV VRF Commercial ManualViewGree Sapphire Service Manual 9 & 12 MBHViewGree Sapphire Service Manual 18 & 24 MBHView