

Click to verify



Capello alarm clock radio instructions

CAUTION: Reduce risk of electric shock by not opening cover and removing protective parts. Qualified service personnel recommended for servicing. DANGER OF ELECTRIC SHOCK warning symbol in triangle, indicates uninsulated voltage within product's enclosure which may cause electric shock. Important instructions inside the literature accompanying appliance. IMPORTANT SAFETY INSTRUCTIONS * Do not expose to rain or moisture to prevent fire or shock hazard. * Use surge protector for AC connection. Lightning and power surges not covered under warranty. * Keep liquid-filled objects away from unit and AC adaptor. * Unplug unit when disconnected and keep ventilation openings clear. * Do not impede ventilation by covering with items like newspapers, tablecloths, curtains etc. * Keep open flames away from unit. * Use only same or equivalent type batteries to avoid explosion. * Dispose of batteries properly according to environmental regulations. RECOMMENDATIONS * Read instructions carefully and keep them handy. * Heed all warnings and follow instructions for safe handling and use. * Do not install near heat sources, use polarized plug, and protect power cord from damage. * Only use attachments and accessories specified by manufacturer. The CR15 Alarm Clock Radio can be used as is or sold with the apparatus. When using a cart, exercise caution when moving the cart/apparatus combination to avoid accidents. Unplug the device during lightning storms or when unused for extended periods. Refer any maintenance to qualified technicians. Maintenance is required if the device has been damaged in any way, such as the power cord or plug, liquid has been spilled, objects have fallen into the device, it has been exposed to rain or moisture, does not operate normally, or has been dropped. CR15 Alarm Clock Radio and user guide. To operate the device, plug in the AC power adaptor to a wall outlet providing 120V AC, 60Hz. The output of the provided AC power adaptor is AC 7.5V 100mA. Notes: Disconnect the AC power adaptor when not in use. Backup battery To maintain accurate time, this unit uses (2) "AAA" batteries (sold separately) for clock backup. Replacing the Battery Open the battery door by pushing in on the tabs, then removing the door. Insert two (2) "AAA" batteries following the correct polarity indicated in the battery compartment. Replace the battery door back on the compartment. Notes: The batteries are used to backup the clock and alarm times when the AC adaptor is disconnected or there is a power failure. Battery precautions: Follow these precautions when using batteries in this device: Warning - Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type. Use only the size and type of batteries specified. Be sure to follow the correct polarity when installing the batteries as indicated in the Battery Compartment. A reversed battery may cause damage to the device. Setting the Clock Plug in the unit. Press and hold the TIME SET button until the clock flashes in the display. Press the TUNE DOWN / HOUR button repeatedly to set the hour and press the TUNE UP / MIN button repeatedly to set the minute. Press the TIME SET button again to store the new clock setting. Note: If you do not press any button for about 10 seconds while setting the clock, the clock setting will be canceled. Playing the Radio With the CR15 plugged in and powered 'ON', press TIME SET / BAND button to select FM or AM band. Repeatedly press the TUNE UP / MIN or TUNE DOWN / HOUR button to manually adjust the tuning on the display until the desired station appears. For auto tuning, press and hold the TUNE UP / MIN or TUNE DOWN / HOUR button until the display starts to scan then release the button and the tuner will automatically search for stations. 1. Tune into the next strongest station and repeat this process until you find your desired station. 2. Extend the FM wire antenna fully for better reception sensitivity. 3. Keep digital music players or mobile phones away from the FM antenna as they may cause interference. 4. Place the FM antenna far from the AC power adaptor to avoid signal loss. 5. To preset a radio station, press and hold the ALARM SET / PRESET button until "P" appears and the preset number blinks on the display. 6. Choose a preset number (01-10) using the TUNE UP / MIN or TUNE DOWN / HOUR button, then confirm by pressing the ALARM SET / PRESET button again. 7. Up to 10 presets can be saved; if you save a new station in an existing position, it will replace the previous one. 8. In STANDBY mode, press and hold the ALARM SET / PRESET button to set the alarm time, which will flash on the display. 9. Adjust the alarm time using the TUNE DOWN / HOUR or TUNE UP / MIN button, then confirm by pressing the ALARM SET / PRESET button. 10. Choose between alarm source (Chime or Radio) and set the desired volume level. 11. To silence the alarm, press the SNOOZE / SLEEP button when it sounds; to extend the snooze duration, repeat this action. 12. When the alarm sounds, pressing the SNOOZE / SLEEP button will temporarily silence it. 13. The CR15 features a sleep timer that automatically turns off the radio after 15 minutes of inactivity (up to 90 minutes). 14. Press and hold the SNOOZE / SLEEP button when powered 'ON' to activate the sleep mode. The Capello CR15 Alarm Clock has several sleep time presets. To view remaining sleep time, press SNOOZE / SLEEP button once while it's active. To cancel sleep timer, keep pressing the button until "OFF" appears on the display. When using your device, remember that alkaline batteries offer the longest backup time. Be sure to replace them when necessary, as indicated by the battery indicator on the display. It's essential to follow all safety instructions, including not exposing the device to water or placing it near heat sources. Make sure to use only the recommended type and size of batteries, and always follow the correct polarity when installing them. Never mix different types of batteries together, and do not try to recharge a battery that is not intended for recharging. Additionally, keep the power cord protected from damage, and ensure that all attachments and accessories are used as specified by the manufacturer. When using the device, unplug it during lightning storms or when unused for extended periods, and refer all servicing to qualified service personnel. It's also important to note the safety precautions outlined in the user manual, including not exposing the unit or AC adapter to water, keeping liquid-filled objects away from the device, and ensuring that the ventilation openings are not blocked. Do not expose this unit to open flames, such as lit candles. Keep it away from enclosed spaces like bookcases with poor ventilation. Use the same or equivalent batteries to avoid explosion risks. Dispose of batteries properly according to environmental regulations. Plug in the unit and press the TIME SET button until the clock flashes on the display. Set the hour by pressing TUNE UP / MIN repeatedly, then set the minute by pressing TUNE DOWN / HOUR repeatedly. Press the TIME SET button again to store the new clock setting. To play radio, plug in and power 'ON', then press the TIME SET / BAND button to select FM or AM band. Adjust the tuning on the display until the desired station appears. For auto-tuning, press and hold TUNE UP / MIN or TUNE DOWN / HOUR until the display starts scanning, then release. Keep the FM wire antenna fully extended for better reception. Avoid placing it near the AC power adaptor to prevent interference. To set a radio preset, tune in the desired station and press and hold the ALARM SET / PRESET button. The preset number will blink on the display; select one using TUNE UP / MIN or TUNE DOWN / HOUR, then confirm by pressing ALARM SET / PRESET again. Recall saved presets by repeatedly pressing ALARM SET / PRESET until the desired preset number appears. Set the alarm in STANDBY mode by pressing and holding the ALARM SET / PRESET button. Set the alarm time using TUNE DOWN / HOUR or TUNE UP / MIN, then confirm with ALARM SET / PRESET. Choose an alarm source (Chime or Radio) and set the maximum volume level. •Alarm setup: Press ALARM SET / PRESET button, then set clock correctly (see "Setting the clock"). •Snooze: Press SNOOZE / SLEEP button when alarm sounds; remaining time displayed on display. •Silence alarm: Press ALARM SET / PRESET button when alarm sounds. •Sleep timer: Press SNOOZE / SLEEP button, then select sleep preset (up to 90 minutes); press button again to view remaining time. •Controls: Speaker, FM antenna, wire, ALARM SET / PRESET, POWER ON / OFF, TUNE UP / MINUTE, TUNE DOWN / HOUR, SNOOZE / SLEEP, LED display, VOLUME + VOLUME -, TIME SET / BAND (AM/FM), AC Power Adaptor. •Location of controls: Speaker, FM antenna, wire, ALARM SET / PRESET, POWER ON / OFF, TUNE UP / MINUTE, TUNE DOWN / HOUR, SNOOZE / SLEEP, LED display, VOLUME + VOLUME -, TIME SET / BAND (AM/FM), AC Power Adaptor. •Radio section: Frequency range (FM): 87.5 - 108 MHz; frequency range (AM): 530 - 1710 KHz. •FCC note: Equipment complies with FCC limits for Class B digital device; user encouraged to follow instructions and measures to correct potential interference. This device complies with Part 15 of the FCC Rules and operates under two conditions: it must not cause harmful interference and accept any received interference. A CAUTION symbol indicates a risk of electric shock, and users are advised to refer servicing to qualified personnel. The presence of uninsulated dangerous voltage within the product's enclosure may pose an electric shock risk. Important operating and maintenance instructions can be found in the literature accompanying the appliance. Unauthorized changes or modifications voids user authority to operate the equipment. 1. Avoid exposing the unit to excessive heat such as direct sunshine, re, etc. 2. Do not block ventilation openings with items like newspapers, tablecloths, curtains, etc. 3. Keep open flames like lighted candles away from this unit. 4. Never place this unit in closed bookcases or spaces without proper ventilation. 5. Use the same type of batteries recommended by the manufacturer to avoid explosion risks. 6. Dispose of batteries properly according to environmental regulations. When seeking prolonged backup time, specific battery recommendations are crucial. Prior to replacing the battery, ensure the AC power adapter remains connected; otherwise, crucial settings like current time, alarm, and station presets might be lost. To determine when replacement is necessary, heed the guidance of low battery indicator or depleted batteries. For safe usage, adhere to these essential precautions: i Warning - Explosion risk if batteries are incorrectly installed. Replace with identical or equivalent types only. ii Stick to the specified size and type of batteries. iii Ensure correct polarity during installation, as indicated in the Battery Compartment. A reversed battery may cause device damage. iv If the device won't be used for an extended period, remove batteries to prevent potential leakage-related damage or injury. v Don't attempt to recharge non-rechargeable batteries - overheating and rupture can occur. (Follow manufacturer instructions.) vi Never combine different battery types (e.g., Alkaline, Rechargeable, Carbon-zinc) or old with fresh ones. The AC power adapter will illuminate on the display when no AC outlet is available.